


# 10 Erg USB Racing Setup

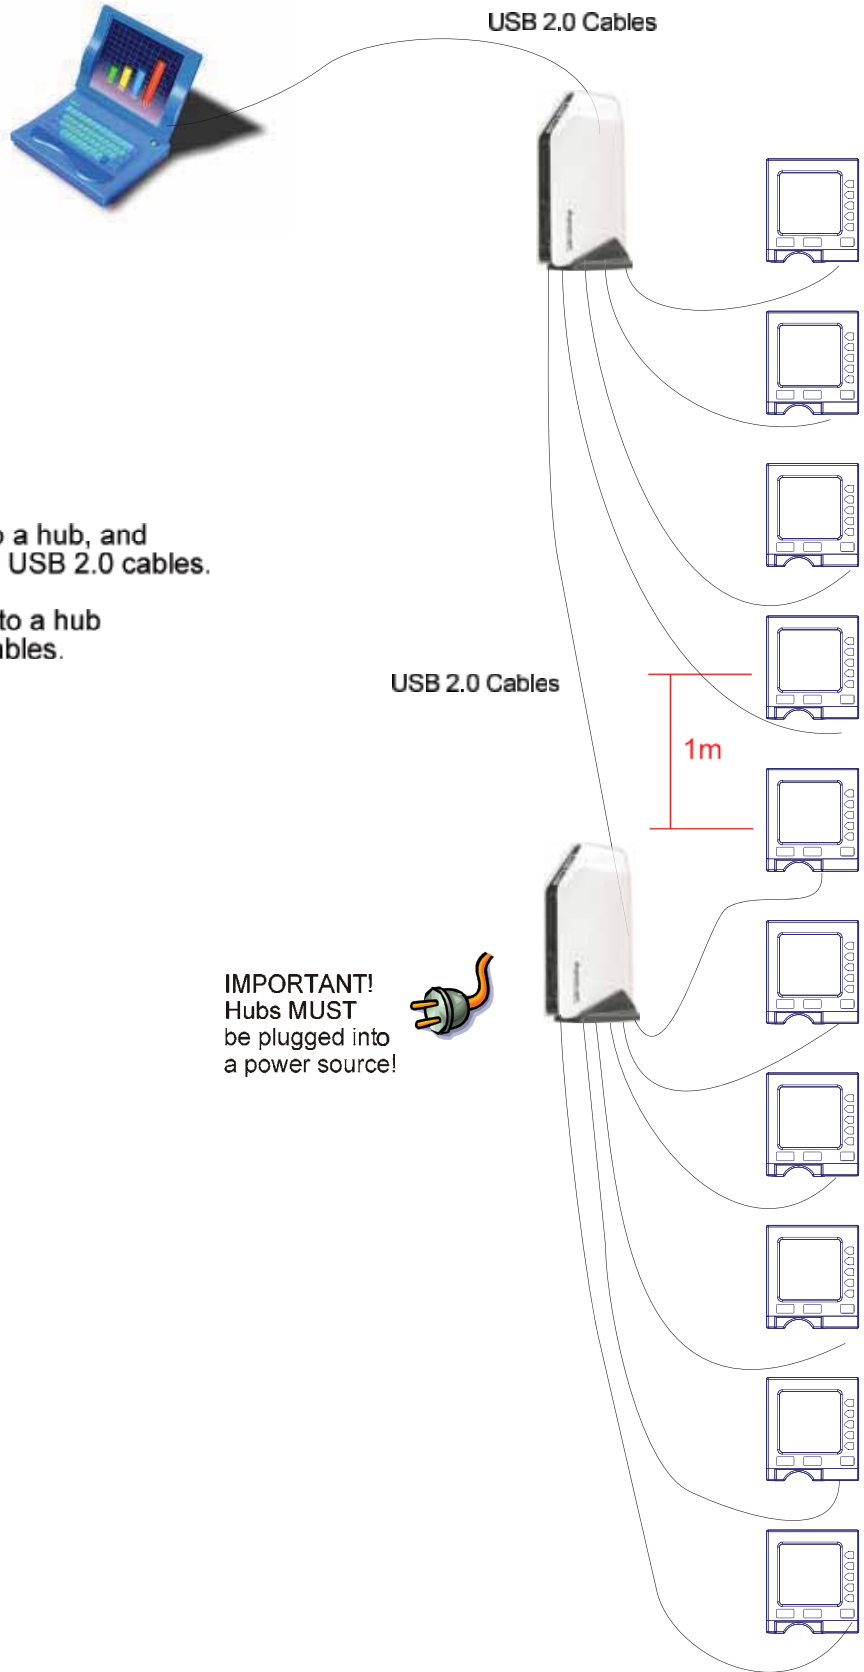

The USB cable connecting the PC to a hub, and connecting hubs together, should be USB 2.0 cables.

The USB cables connecting the PM to a hub can be either USB 2.0 or USB 1.1 cables.

USB 2.0 Cables

1m

**IMPORTANT!**  
Hubs **MUST**  
be plugged into  
a power source!

